



FieldLab Mobile

Quick Start Guide

Your gauge does more with the free FieldLab Mobile app. Connect to your phone or tablet to log pressure and temperature data from multiple Bluetooth gauges in a single test run. Name each reading, view them all on one chart, and export everything in one PDF or CSV file.

SET UP THE HARDWARE

1 Connect the Bluetooth antenna



2 Power on the gauge







3 Install and open the **FieldLab Mobile app**. Allow Bluetooth when prompted.



Scan the QR code above, or search "FieldLab Mobile" in your app store.

LOG A TEST IN THE APP

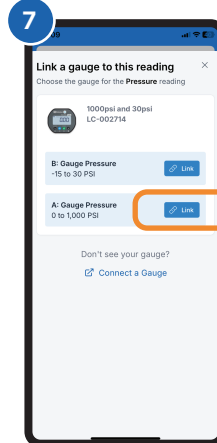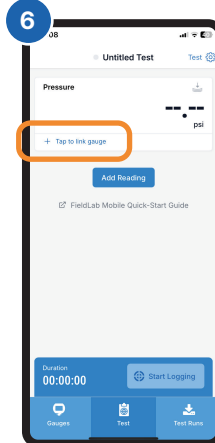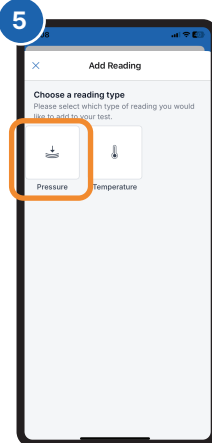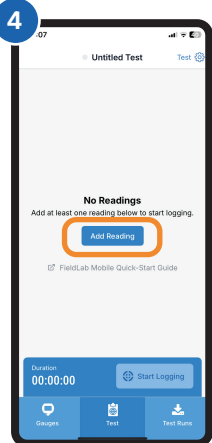





4 On the Test screen, tap **Add Reading**.

5 Choose the reading type - **pressure** or **temperature**.

6 Tap **Tap to link gauge**.

7 Tap **Link** for the sensor you want to use.

Add more readings: To include additional pressure and/or temperature readings in the Test Run, repeat steps 4-7 before you start logging.

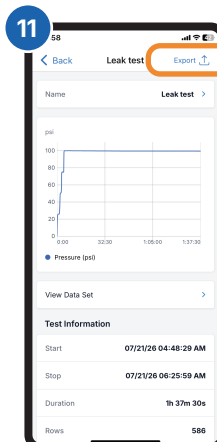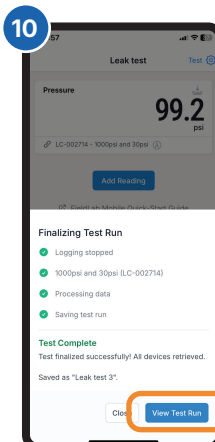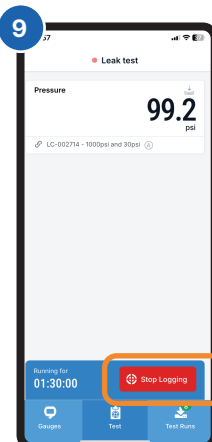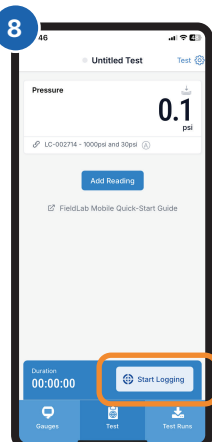

8 Tap **Start Logging** to begin your Test Run.

9 Tap **Stop Logging** to finish and import your data.

10 Tap **View Test Run** to see your test data.

11 Tap **Export** to share or save your data.